



Emergency Egress (Optional Feature)

The Emergency Egress feature provides a simple and convenient means of exiting a Roll Seal RS-500 Door from the inside of the structure should the door motor become inoperative due to a power failure or other conditions.

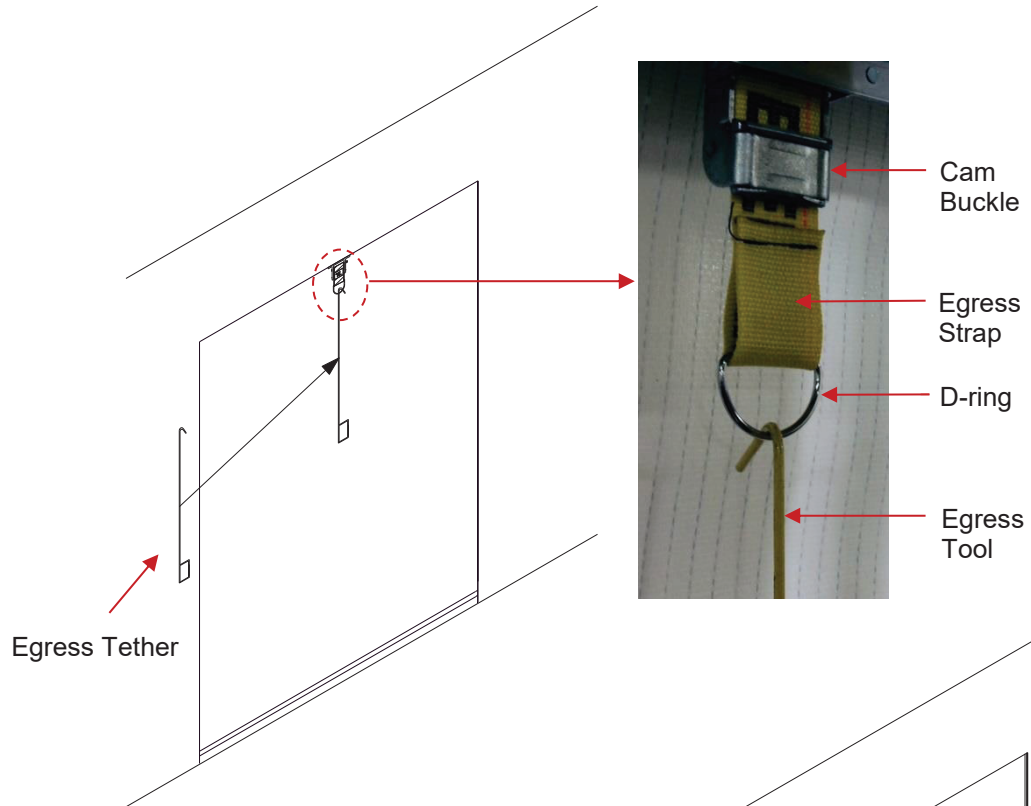

Exiting (Opening) The Door



1. Remove Emergency Egress Tool from the retainers on the side of the door.
2. Connect the hook end of the tool to the D-Ring on the top of the door frame.
3. Pull down on the Egress Strap. The Door will raise approximately half way up. The door will open enough for a person to exit the structure.

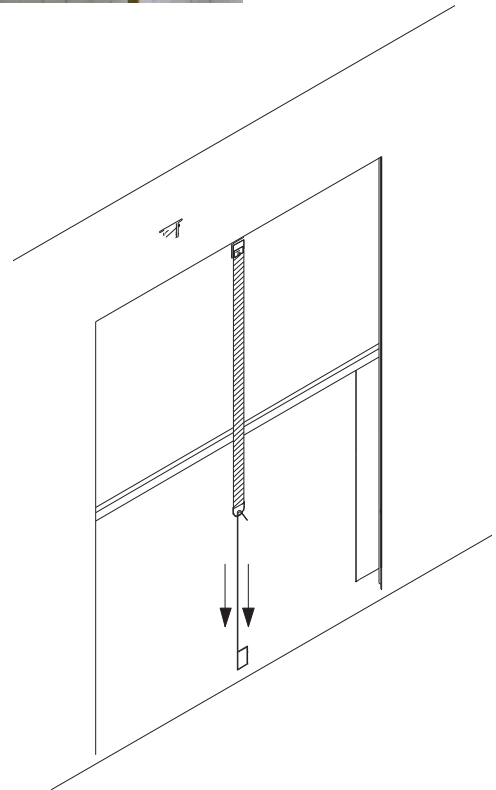

Resetting (Closing) The Door

After the RollSeal RS-500 Door is opened by using the Emergency Egress Strap, the door must be carefully re-set to ensure proper operation in the future.

1. Firmly hold strap.
2. Press the Cam Buckle Release.
3. Gradually feed strap through Cam Buckle until door is closed at bottom and D-ring is in the position shown in
4. Return Emergency Egress Tool to retainer for future use.
5. Cycle the door up and down in normal operating mode to ensure proper re-setting of the door. Adjust if necessary. Door should now function normally.

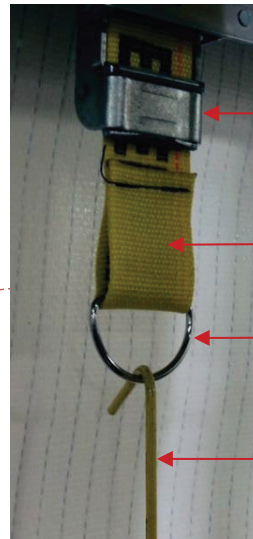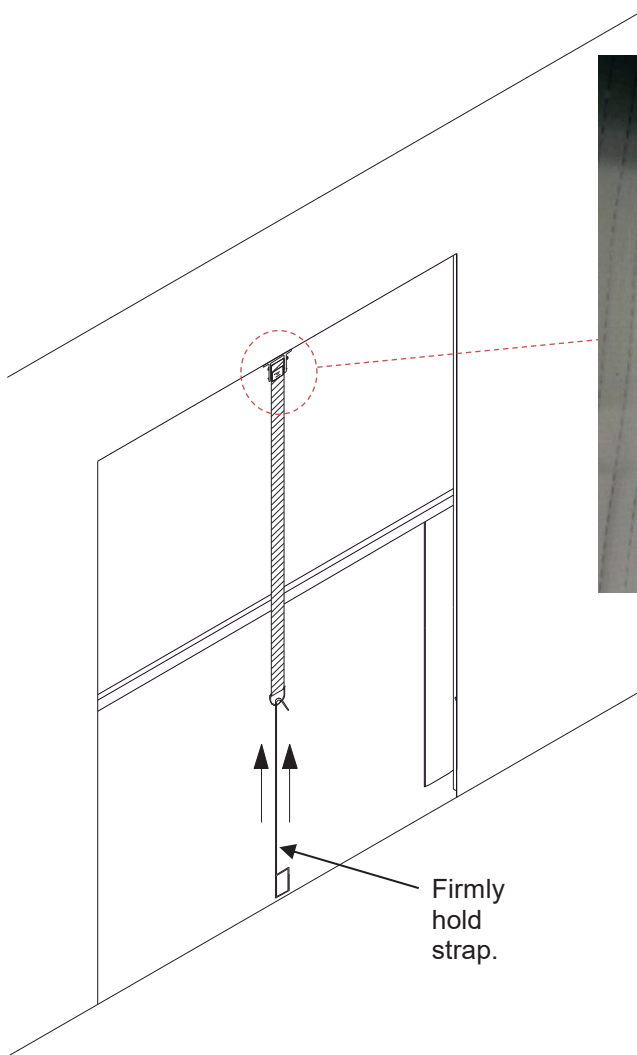

NOTE: This view shows the Cam Buckle as seen from the back of the door when the Egress Strap has not been pulled.

Cam Buckle

Egress Strap

D-ring

Egress Tool

Cam Buckle Release

NOTE: The Release for the Cam Buckle is located on the panel side of the Buckle. This view shows the Cam Buckle as seen from the front of the door.

